

BODY

Bonnet safety catch	122
Bonnett safety catch	123/7
Carpets & Felts	205/13
Demisting windscreen	123/6
Elimination of water entry through hard top	205/16
Facia assembly modification	205/8
Floor mats	208/2
Fitting hardtop	205/15
Hood leaks	120/8
Hood seam sealer	204/2
Improved hood design	126/7
Lacroe auto-body protector	206/1
Paintwork	123/10
Paintwork	126/1
Paint codes manufacturer's number	202/10
Paint	204/8
Remove of wax	204/9
Rear wing panel to rear tonneau filler strip	115/4
Silastic 732 RTV adhesive	126/8
Spare wheel carrier fowl	106/3
Tonneau cover fitting instructions	108/1
Tonneau cover	123/2
Towing Bracket	202/7
Water ingress	206/9
Windscreen renewal procedure	123/8
Windscreen conversion kit	115/1

BRAKES

Handbrake compensator	202/6
Hydraulic connections	208/4

Self adjusting brakes	204/1
Self adjusting brakes	205/4

COOLING SYSTEM/HEATING

Anti-freeze solution	100/1
Engine temperature sender unit	111/13
Retention of heater console bezel	108/3
Water cut-off valve to heater	208/5

ENGINE

Camshaft belt tensioning	110/4
Camshaft housing to cylinder head gasket joint	111/11
Camshaft cover fixing	111/12
Camshaft belt tensioning	115/3
Camshaft housing oil leaks	204/10
Camshaft housing oil leaks	205/5
Camshaft housing gasket	205/7
Checking engine oil level	110/3
Connecting rods	123/9
Cylinder liner clamp	110/7
Cylinder head stud	120/2
Cylinder head stud	200/2
Cylinder head	204/5
Crankshaft rear oil seal	206/11
Distributor centre shaft oil leak	202/5
Engine lubrication	205/2
Engine lubrication system	115/2
Engine procedures	110/2

Engine Lubrication system	111/2
Engine lubrication system	115/2
Gasket - camshaft housing to cylinder head	123/3
Gudgeon pins	204/4
Installing the crank shaft	110/8
Inlet camshaft	120/7
Medified camshaft Housing	202/9
Modified camshaft fitment	200/5
Oil cooler pipes	111/8
Oil cooler pipes-modification	108/2
Oil pipe - oil vapour seperater to sump	104
Oil pressure gauge pipe chafing	111/9
Oil pump housing to distributor oil tight joint	126/5
Oil entering airbox - camcover mod	202/1
Oil pressure delay	205/10
Sump dipstick	202/4
Sump oil capacity	202/3
Valve guide oversizes	208/6
Water pump location circlip deletion	200/3
Water pump shaft and pulley assembly	205/9
Water pump shaft - undersize	106/1

SUSPENSION

Lubrication of front suspension ball joints	111/5
Front & rear suspension dampers	120/3
Front & Rear suspension dampers	126/4
Front suspension mounting bolts	206/7
Shock absorbers	205/1
Handling - suspension	206/4

FUEL SYSTEM

Carburettor flooding - petrol tank mod	201/1
Carburettor mountings	204/3
Carburettor needle valves (stromberg)	205/12
Dellorto DHLA 4OE Carburettor	205/14
Fuel line filters	126/6
Fuel tank air bleed	115/5
Fuel pipe chafing	203/1
Fuel pump pipes	111/6

IGNITION/ELECTRICAL SYSTEM

Battery care during storage	120/9
Direction indicator and wiper switch	126/3
Hardtop backlight harness	205/6
Ignition data	200/6
Panel light rheostat switch	120/1
Radio feed wire	111/4
Removal of armature retaining ring	100/2
Replacement ignition switch	120/4
Sparking plugs	120/6
Starter solenoid feed	111/1
Wiring loom	204/11

MISCELLANEOUS

Missing vehicle	208/3
Misuse of literature	200/4
Routine servicing	202/8
Standard repair times	205/3
Standard repair times	110/6

REAR AXLE

Crown wheel & Pinion	204/7
Rear axle oil, thio-hypoy	120/5

STEERING

Lower steering column pinch bolts	201/2
Steering wheel fixing	204/6
Steering shaft U.J.	205/11

TRANSMISSION

Gearbox oil capacity	110/1
Jumping out of gear	106/2
Propeller shaft	123/4

WARRANTY

Amendment to warranty defect code	110/9
Additives to warranty defect code	111/3
Defect code	206/1
Material labels	206/8
Propshaft replacement - warranty	206/10
Radiator repairs - warranty	206/6
Warranty claim forms	123/5
Warranty returns	126/2
Warranty continuation forms	206/2
Warranty returns - steering locks	206/3

WHEELS & TYRES

Front hub seal	208/1
Front hub nut	207
Wheel nut seizure	III/6
Wheel nut tightening	I23/I